



UNIVERSAL LEG COVER

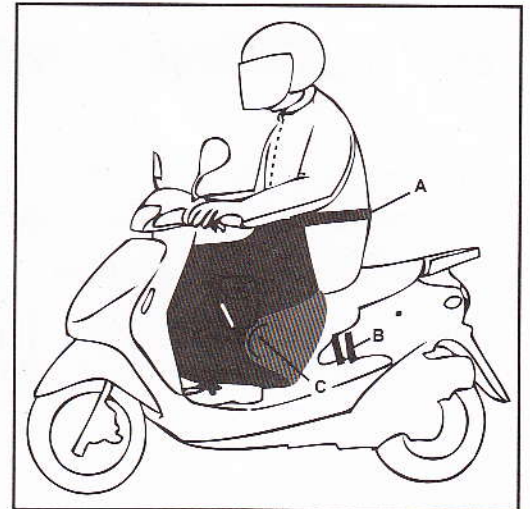


INSTRUCTIONS

- Spread the AWA TECH Leg Cover over your legs and close the belt behind your back, making sure it clicks in properly (**A**).

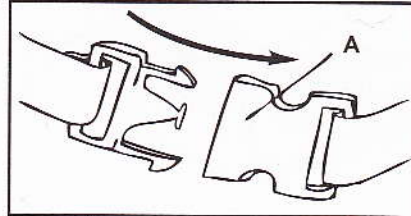


- Find your ideal driving position and locate the area in which the “Velcro” sewn onto the AWA TECH Leg Cover comes into contact with the bodywork of the scooter.

- Attach the two pieces of “Velcro” with adhesive backing (**B**) to the area of the bodywork identified, on both sides of the scooter, in correspondence with the “Velcro” (**C**) sewn onto the AWA TECH Leg Cover. It is recommended that the “Velcro” pieces be applied to smooth/painted areas of the bodywork.

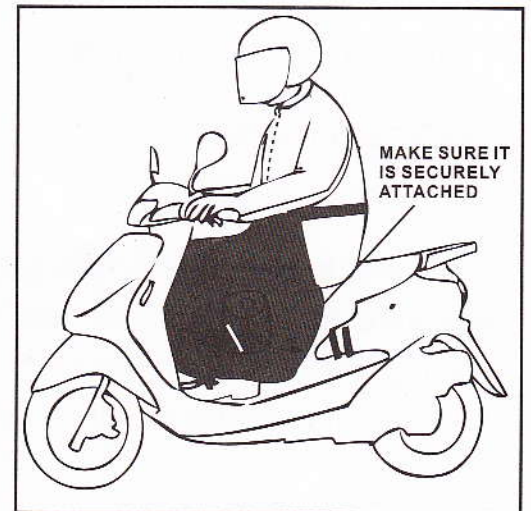



- When using the AWA TECH Leg Cover, make sure that the sewn “Velcro” (**C**) and the “Velcro” applied to the scooter (**B**) are securely anchored: this will prevent any troublesome lateral flapping of the AWA TECH Leg Cover.

- For scooters with a central support bridge, open the zipper located on the lower part of the AWA TECH Leg Cover. This will prevent the bridge from pushing up the AWA TECH Leg Cover.

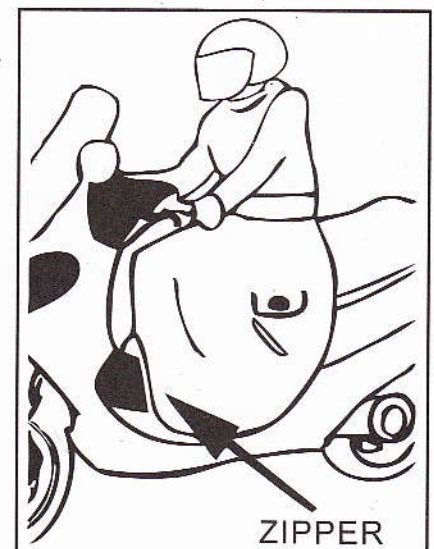


ISTRUZIONI DI MONTAGGIO

- Stendete il Vostro c.u. AWA TECH sulle gambe ed agganciate la cintura dietro la schiena facendo scattare bene la chiusura **A**.

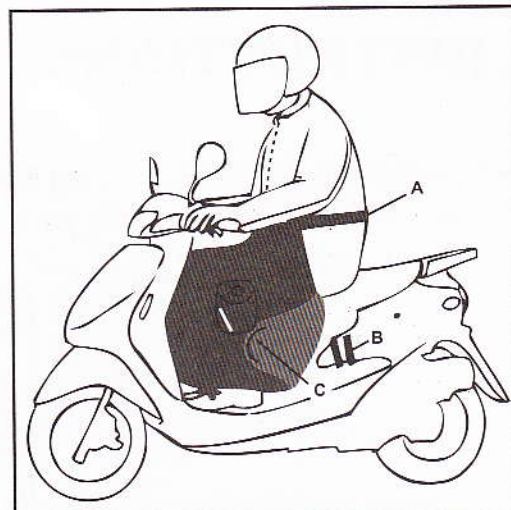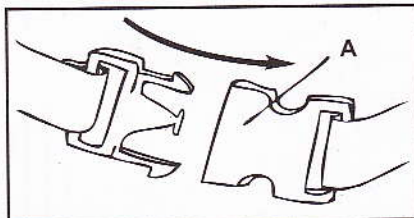

- Prendete la posizione di guida ideale ed individuate la zona in cui il "velcro" cucito sul Vostro c.u. AWA TECH va in contatto con la scocca dello scooter.

- Applicate sulla scocca i due segmenti di "velcro" adesivizzati **B** nella zona individuata, in corrispondenza del "velcro" **C** cucito sul Vostro c.u. AWA TECH sui due lati dello scooter. E' consigliabile applicarli su zone lisce/verniciate della carrozzeria.

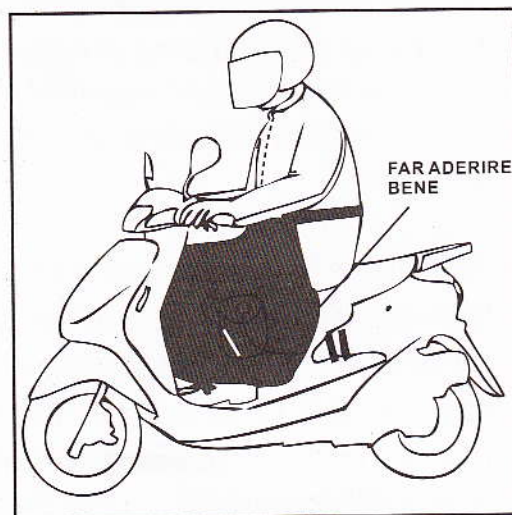

- Quando utilizzate il Vostro c.u. AWA TECH fate in modo che il "velcro" cucito **C** e quello applicato sullo scooter **B** si ancorino bene: eviterete così i fastidiosi sventolii laterali del Vostro c.u. AWA TECH.

- Qualora avete uno scooter con il ponte centrale aprite la cerniera posta sulla parte bassa del Vostro c.u. AWA TECH.

In questo modo eviterete che il ponte sollevi il Vostro c.u. AWA TECH.

