


HONDA SH 125i-150i 2020 ATT. FABBRI

3355/A - 3358/LS - 3355/BE att. 3357/E

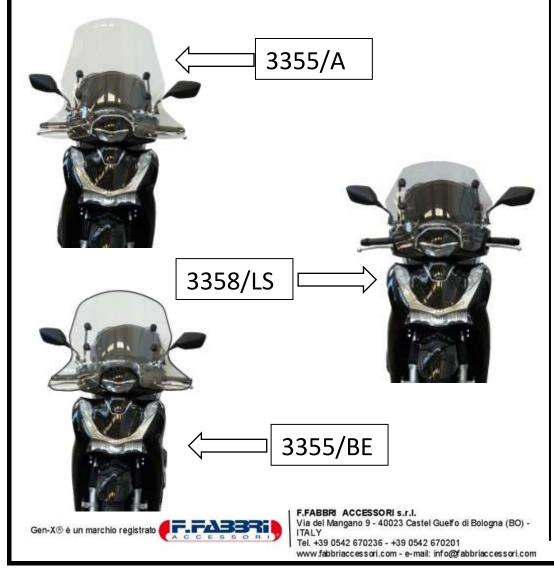




Close-up right side

- 1) Unscrew the rear view mirrors
- Pre assemble bolt M10x80, flat washer, grower,metallic support (right side in the picture and bush 14x55
- 3) Fix without tightening



- 1) Insert the plastic clamps on support (as picture aside)
- 2) Pre assemble the screen fixing system
- Center the screen and fix all nuts and bolt without overtighten
- Fix the mirrors, without Honda original colums supprts, by provided left thread nuts

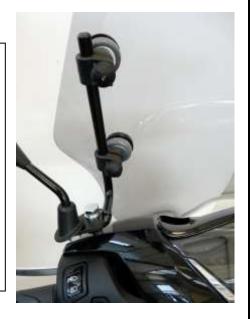

LH/RH supports	1+1
Flat washer	2
Grower	2
Bush 14x55	2
Bolt M10x80	2
Nut left thread	2